

product information
HA-UV Room disinfectant 3D - version 2 with motion detector

manual room disinfection with UV-C radiation

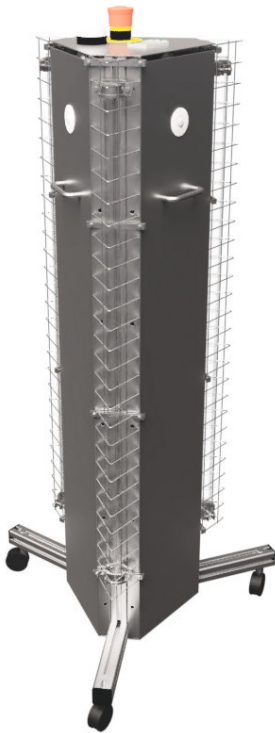


image HA-UV Room disinfectant 3D

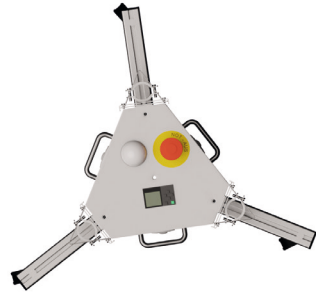


image HA-UV Room disinfectant 3D
view from above

HA-UV Room disinfectant 3D

With the HA-UV room disinfectant 3D you can disinfect your rooms easily and without effort. With its high-energy UV-C radiation, the device irradiates all surfaces in the room. The emitted UV light has a wavelength of 254 nm and is therefore particularly germicidal.

handling:

- set up the device in the room
- switch on the device and select the disinfection time
- leave the room and wait for the disinfection cycle to end

scope of application:

- suitable for the disinfection of laboratories, hospitals, clinics, industrial rooms
- installation of the HA-UV room disinfectant 3D at defined, fixed disinfection points
- operation on the 230V power supply

safety devices:

- lamp protection grille
- presence detector for automatically switching off the lamps when people are present

particularities:

- effective fight against viruses and bacteria through short-wave and high-energy UV radiation
- optimal arrangement of the UV lamps for 360 ° all-round irradiation of the room
- minimizing the risk of infection with hospital infectious germs from patients and staff

technical specifications

height [mm]	1350
diameter base [mm]	750
weight [kg]	15

electrical connection data

electrical connection [V AC / Hz]	230 / 50
connected load [W]	800
power consumption [A]	3,8
fuse [A]	16
ip-code	IP20
protection class	1

light source data

wavelength [nm]	254 (UV-C)
number of lamps	3
beam angle [°]	360
power per lamp	180 W
total power of all lamps	540 W
lifespan [h]	9000

safety devices

splinter protection for lamps	designed as a grid
presence detector	3 highly sensitive motion detectors with 360 ° all-round monitoring for automatic switch-off of the lamps when people are present, max.range 12 m

Sonstige Daten

ambient temperature [°C]	5 - 30
material	aluminium
room size	10 m ² bis 30m ²

Stammdaten

item number	10110648
uvp [€] plus VAT	6.195,00



image HA-UV Room disinfectant 3D in action in operating room

product information
HA-UV Room disinfectant 3D - version 2 with motion detector
manual room disinfection with UV-C radiation



image HA-UV Room disinfectant 3D



image HA-UV Room disinfectant 3D detail top view

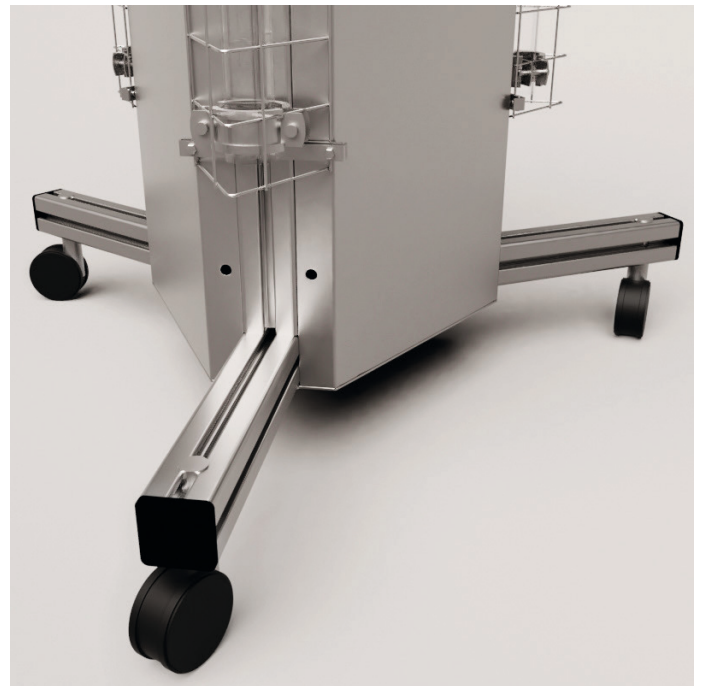


image HA-UV Room disinfectant 3D detail base view

product information
HA-UV Room disinfectant 3D - version 2 with motion detector
manual room disinfection with UV-C radiation



image HA-UV Room disinfectant 3D overall view



image HA-UV Room disinfectant 3D in action in operating room



image HA-UV Room disinfectant 3D in resident's room in a retirement home